





1. Excavate the Trench

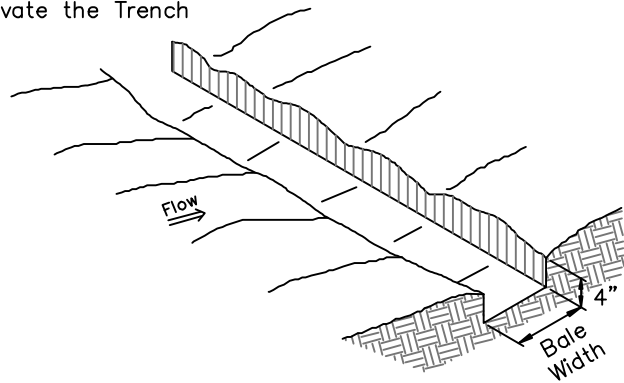

2. Place and Stake Straw Bales

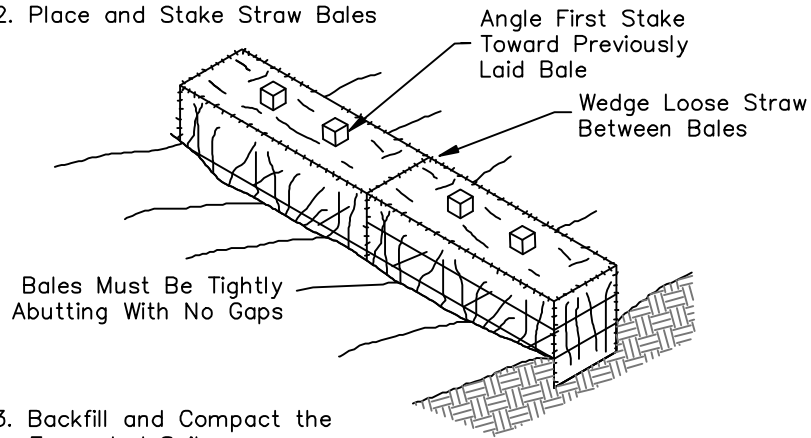

3. Backfill and Compact the Excavated Soil

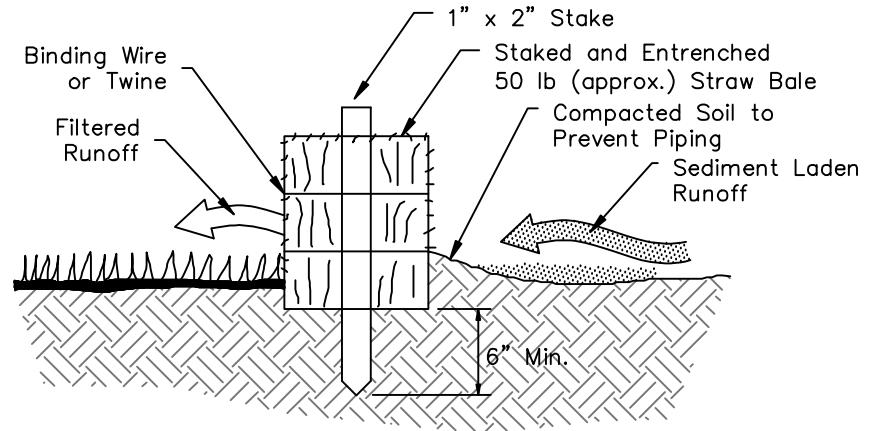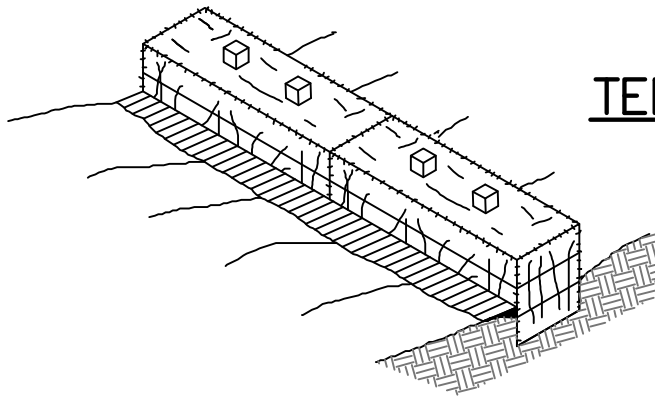

**PROPERLY INSTALLED STRAW BALE  
(Cross-Section)**

## TEMPORARY STRAW BALE SEDIMENT BARRIER

CITY INDEX NO. 612; 1 OF 1

N.T.S.

REV.	DATE	DESCRIPTION	APP.	CITY OF CLEARWATER, FLORIDA ENGINEERING DEPARTMENT	
				DRAWN BY Novo	TEMPORARY STRAW BALE
				CHECKED BY B.G.	SEDIMENT BARRIER
				DESIGNED BY A.C.	
					DATE 08/09
					INDEX NO. 612
					1 OF 1